




# Install and start monitor

Written By: Tanya Taylor




## Step 1 — Unpack monitor

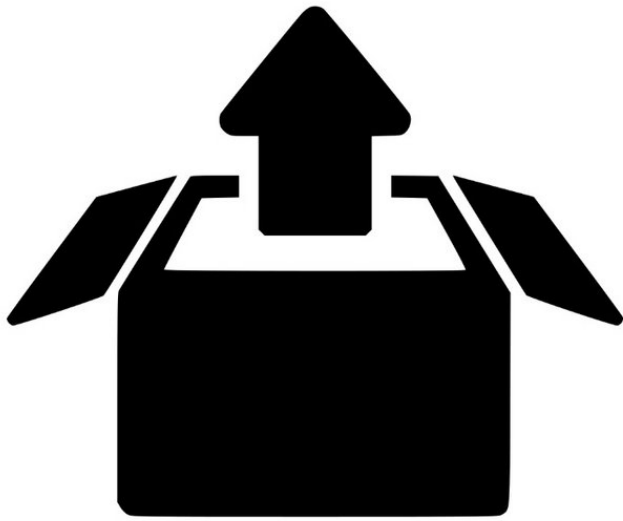

- Open your SM70 box and verify all components have been shipped as per the packing slip.
  - SM70 monitor
  - 12 VDC power adaptor
  - Mounting brackets
  - User guide
- Contact Aeroqual or your representative if you suspect any parts are missing.

## Step 2 — Install monitor

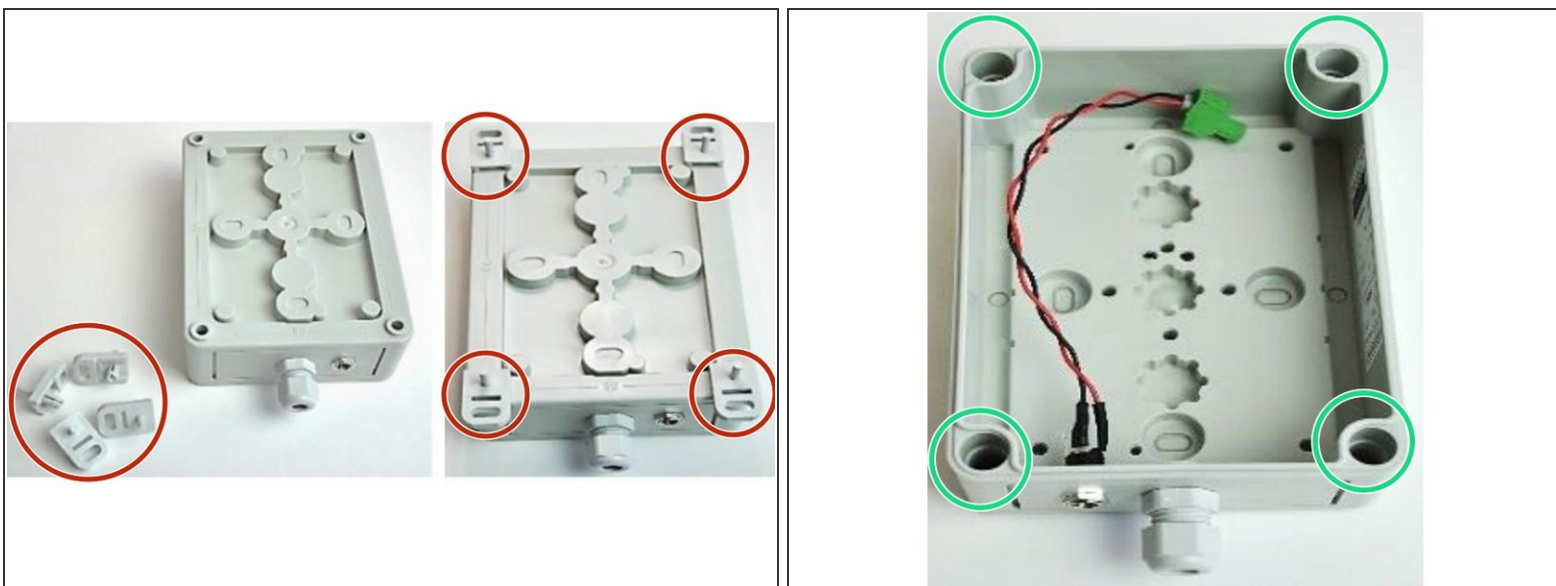

- Find a location that's free from any contaminants that might affect the performance of the sensor.
  - ❗ The monitor is 130 x 94 x 57mm and weighs 270g.
- Attach your SM70 to the wall using the mounting brackets that came with the monitor. The brackets fit into the holes at each corner of the enclosure.
- Alternatively, you can screw the monitor directly to the wall using the concealed, tamperproof screw holes in the corner posts of the enclosure.

### Step 3 — Turn on monitor



- Plug the 12 VDC power adapter that came with your SM70 directly into the monitor and mains power.
- To start the monitor, simply turn it on at the mains switch.
- ① At start up, the status LED on the sensor board flashes green 2-6 times at an interval of 0.5 seconds. During the following 3 minute warm-up, it flashes at an interval of 2 seconds.
- ① The inbuilt warming cycle allows the sensor to achieve a stable baseline. Under certain conditions, the warm-up time may be longer. If it's the first time the monitor has been powered on, it's recommended to run it for 24 hours for stable readings.

## Step 4 — During operation



- The SM70 is designed to run constantly and when it does so, the status LED on the sensor board glows green.
- During operation, real-time gas concentrations display continuously on the monitor's integrated LCD display.
- When the relay is energized, the relay LED on the sensor board glows red .
- To stop the monitor, turn it off at the mains switch.

For further support, contact [Technical Support](#).