




# Replace SSD in ePC


Written By: Tanya Taylor

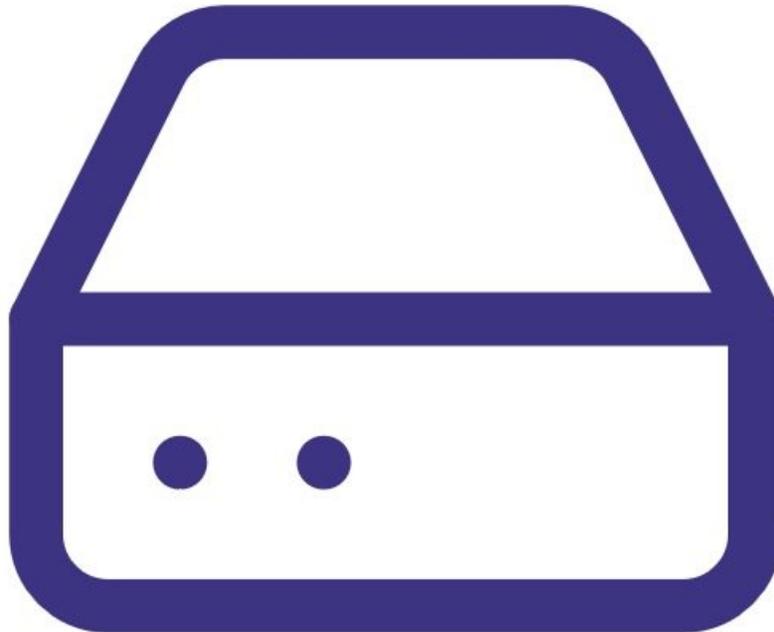

 **TOOLS:**

- [Small Phillips head screwdriver](#) (1)
-

## Step 1 — Remove back

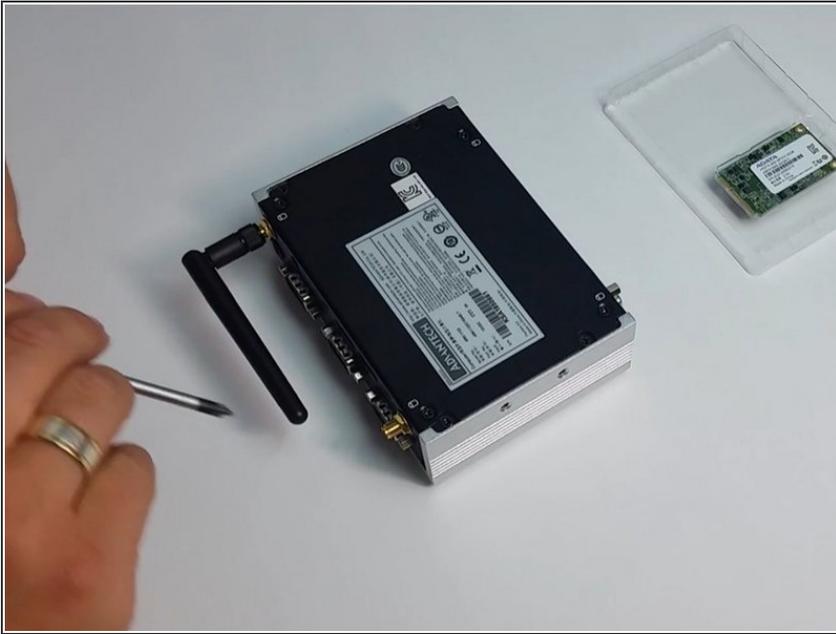

- Turn the ePC over.
- Remove the back by unscrewing the 4 small corner screws.

## Step 2 — Remove SSD



- Remove the old solid state drive (SSD) by releasing the two corner screws.

### Step 3 — Insert new SSD



- Carefully insert the new SSD and screw in to place.
- Re-screw the back onto the ePC.

### Step 4 — Video of steps



- For extra help, watch our video.

For further support, contact [Technical Support](#).