




# Replace sensor head in industrial enclosure

Written By: Tanya Taylor



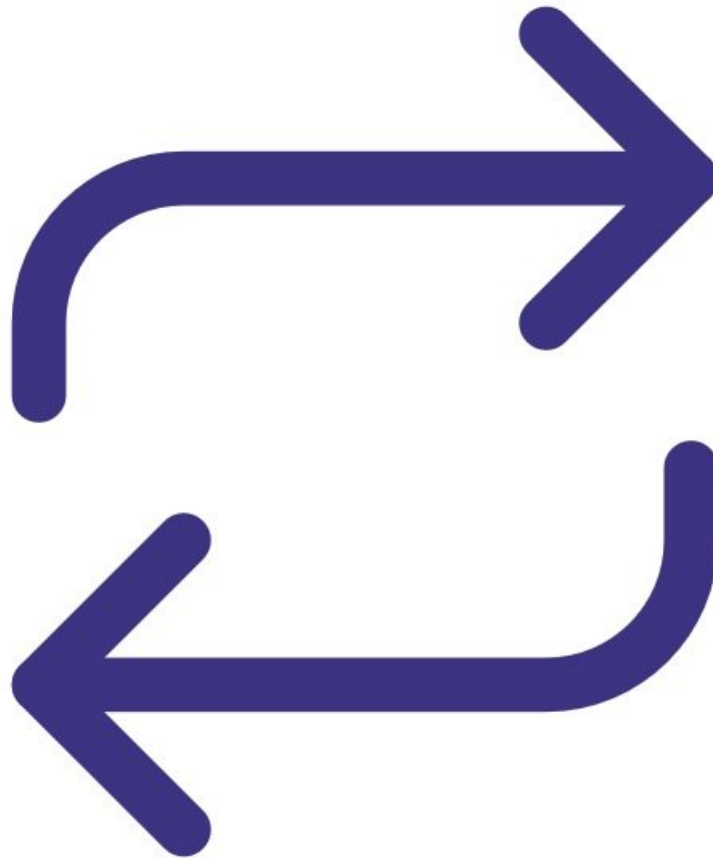

## TOOLS:

- [Small flat head screwdriver](#) (1)
-

## Step 1 — Remove sensor head



- Using a flat headed screw driver, undo the four lid screws at each corner and remove the lid.
- Undo the lock nuts on either end and remove the inlet and outlet nozzles.
- Remove the sensor head by carefully pulling it upwards, disconnecting it from the monitor.

## Step 2



- Replace the sensor head with another Type 2 sensor.
- Re-insert the nozzles and tighten using the lock-nuts, ensuring there's a tight fit against the sensor head.
- Replace the lid and tighten the four lid screws.

For further support, contact [Technical Support](#).