

Set up text and email alerts for monitoring location

Written By: Tanya Taylor



Set up text and email alerts for monitoring...

INTRODUCTION

Use this guide to set up alerts for high pollution levels or monitor issues at a monitoring location.

Step 1 — Enter Administration app



• From the Aeroqual Cloud home screen, select **Administration**.

Step 2 — Select monitoring location



 Select the monitoring location you want to create an alert for and click
 Configure.

Step 3 — Go to alerts

Q⊖ O⊖ Configure ~ Main Entrance Rosebank Road ~						
Alerts	+ Add a new alert					

- Click Alerts in the side menu.
- Click Add a new alert.

Step 4 — Set up alert

ain Entrance Roseba	ink Road 🐱						Journal 🗸 🛛 Tanya 🗸
Set point exce	eded V AIR RH(%) V	Raw data 🛛 🛩	Set point	0	Reset point	0	Triggering on
Rising edge Disable this a Email address	alert when servic	e mode is activa SN	ted or a calil //S	oration	n is being perfo	rmed Langu	Jage
English (New 2 Save	Zealand) ~ Remove						
+ Add a new alert							

• Set up the alert as you would for a single monitor.

For further support, contact <u>Technical Support</u>.