


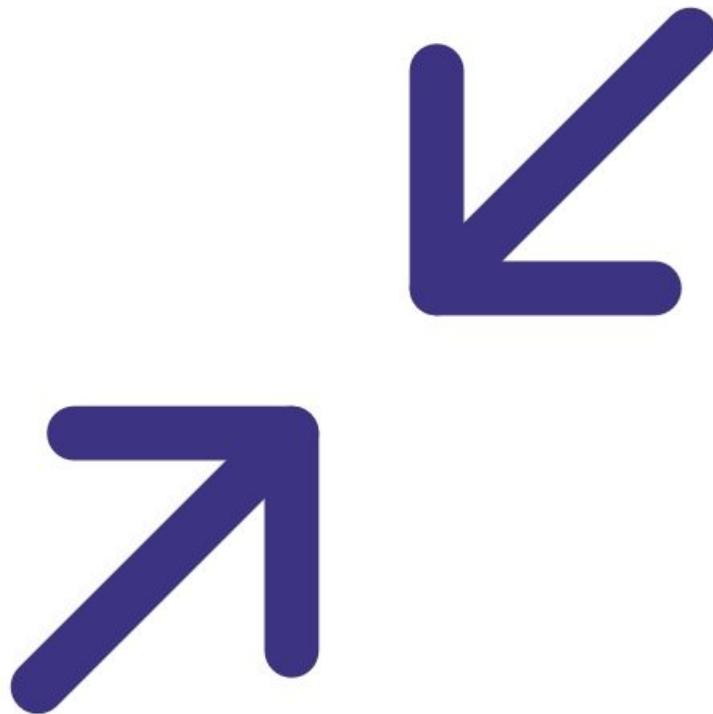

# Manually zero calibrate (via software)

Written By: Tanya Taylor



## INTRODUCTION


Use this guide to manually carry out a zero check using the AirCal 1000 PC software.



### PARTS:


- [AirCal 1000 portable calibrator](#) (1)
  - [USB to RS232 converter](#) (1)
-

## Step 1 — Enter zero function

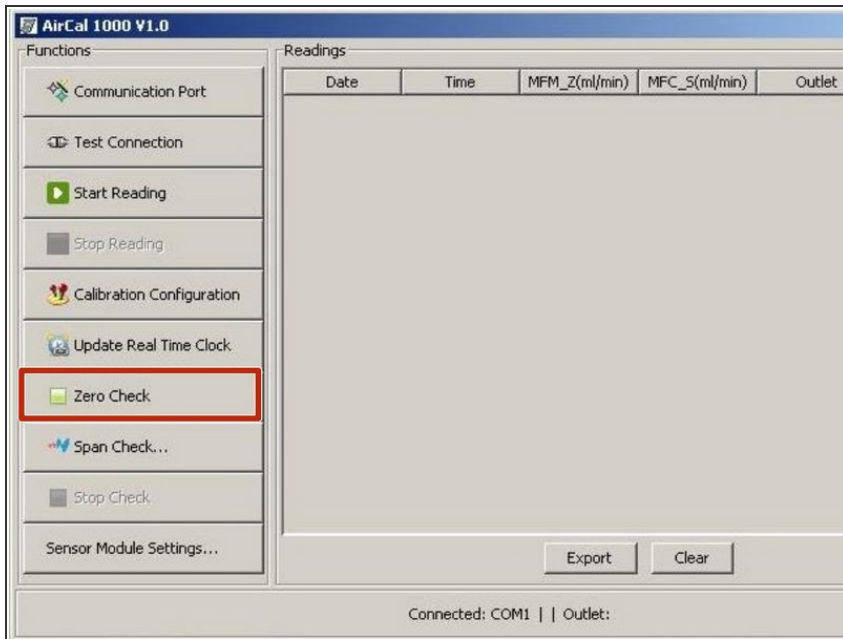

- Select the **Zero Check** option in the **Functions** panel.

## Step 2 — Start zero check

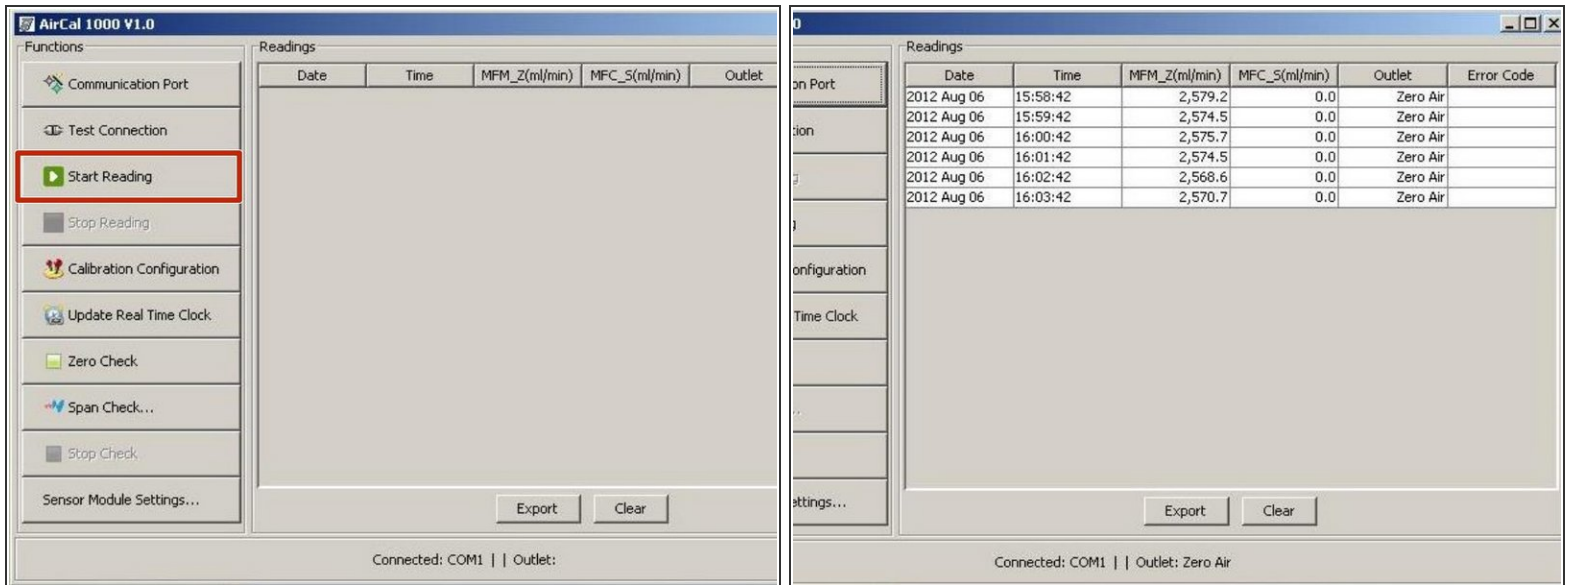

- To start the recording of data every minute, select **Start Reading** in the **Functions** panel.
- Wait 15 minutes for the sample gas to stabilize.
- *i* There may be some fluctuation in the MFM measurement ( $\pm 5$ ml/min).
- To stop data recording, select **Stop Reading** in the **Functions** panel. The data can then be cleared or exported to spreadsheet.
- To stop the zero check completely, select **Stop Check** in the **Functions** panel.

For further support, contact [Technical Support](#).