




Manually zero calibrate (via display)

Written By: Tanya Taylor

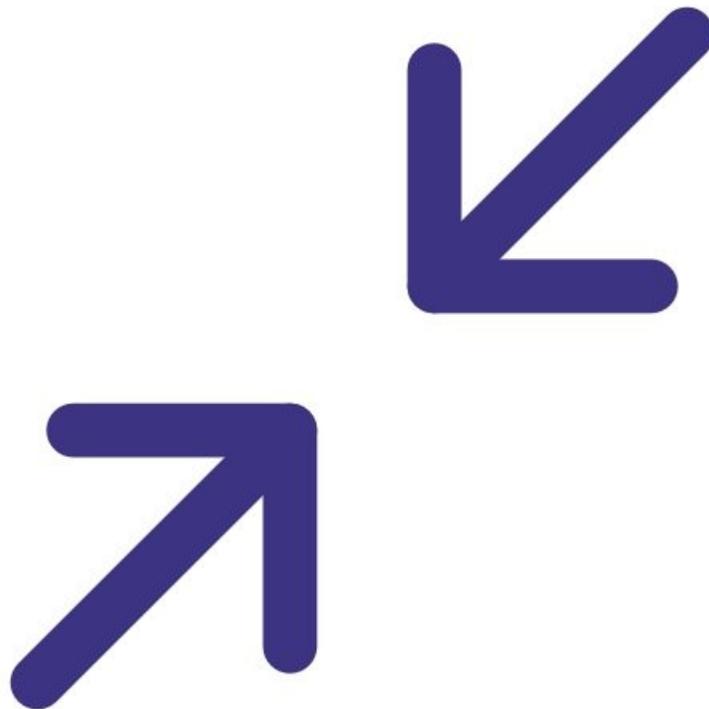

INTRODUCTION

Use this guide to manually carry out a zero check using the buttons on the front panel of the AirCal 1000.



PARTS:

- [AirCal 1000 portable calibrator](#) (1)
-

Step 1 — Enter manual menu

```
Aircal 1000 U1.0
MFM AIR      4.6 cc
MFC GAS      0.0 cc
>MENU
```

```
      Main Menu
> Exit
  Manual
  Auto Run
```



- Use the **UP** and **DOWN** buttons on the front of the AirCal 1000 to select **>MENU** on the home screen.
- Press the **ENTER** button.
- Use the **UP** and **DOWN** buttons to select **Manual** from the main menu.
- Press the **ENTER** button.

Step 2 — Start zero check

```
Back
> Select Port 0
  DilutionRatio 0
  Start
```

- Use the **UP**, **DOWN** and **ENTER** buttons to set the port to 0.
- Use the **UP**, **DOWN** and **ENTER** buttons to set the dilution ratio to 0.
- Use the **DOWN** button to select **Start** and press the **ENTER** button.

For further support, contact [Technical Support](#).