aeroqual

Set measurement units

Written By: StJohn Vuetilovoni



This document was generated on 2022-05-09 02:59:11 PM (MST).

Step 1 — Enter units menu



- If you have a Series 500 or 300 monitor:
 - Press the ENTER button and select MONITOR SETUP from the main menu.
 - Select **UNITS** from the secondary menu.
- If you have a Series 200, press the ENTER button and select UNITS from the main menu.

This document was generated on 2022-05-09 02:59:11 PM (MST).

Step 2 — Change unit



- Use the **UP/DOWN** buttons to change the units for your particular sensor:
 - ppm or mg/m3 for a gas sensor.
 - °C or °F for a temperature and relative humidity sensor.

(i) mg/m3 is the only option for a PM sensor.

- To learn about the ppm to mg/m3 conversion factor for each sensor head, read here.
- Press ENTER to confirm.

For further support, contact <u>Technical Support</u>.

This document was generated on 2022-05-09 02:59:11 PM (MST).