


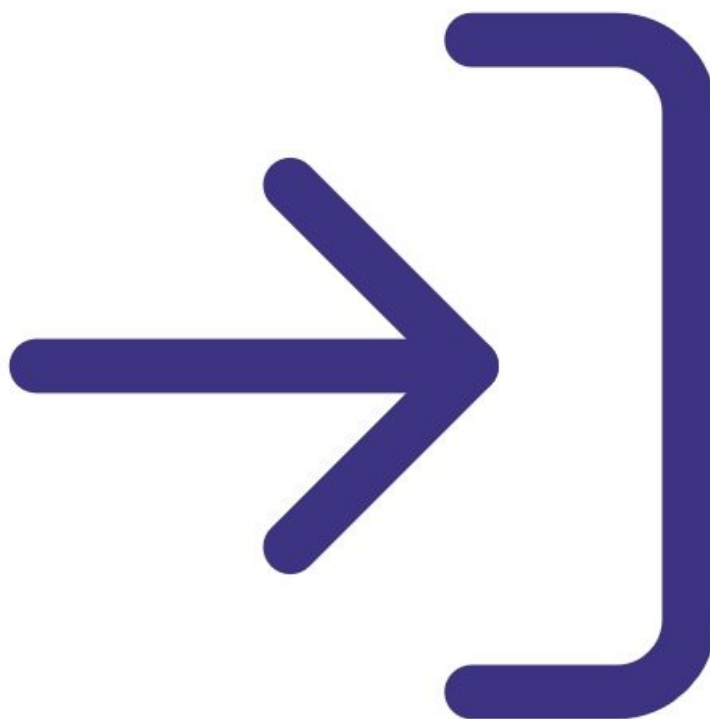

# Log data directly to computer

Written By: StJohn Vuetilovoni




## INTRODUCTION

Use this guide to log data directly from your Series 500 monitor to your PC. This is an alternative to [logging data into the memory of the handheld monitor](#).

This guide assumes you have already [installed the monitor's configuration software](#), [downloaded the cable driver](#) and [connected your monitor to a PC](#).

**Note:** Series 500 software isn't a network product so you can't log data directly to a PC for more than one handheld monitor. For network logging, you may want to consider a [Series 900 fixed monitor](#).

## Step 1 — Start logging

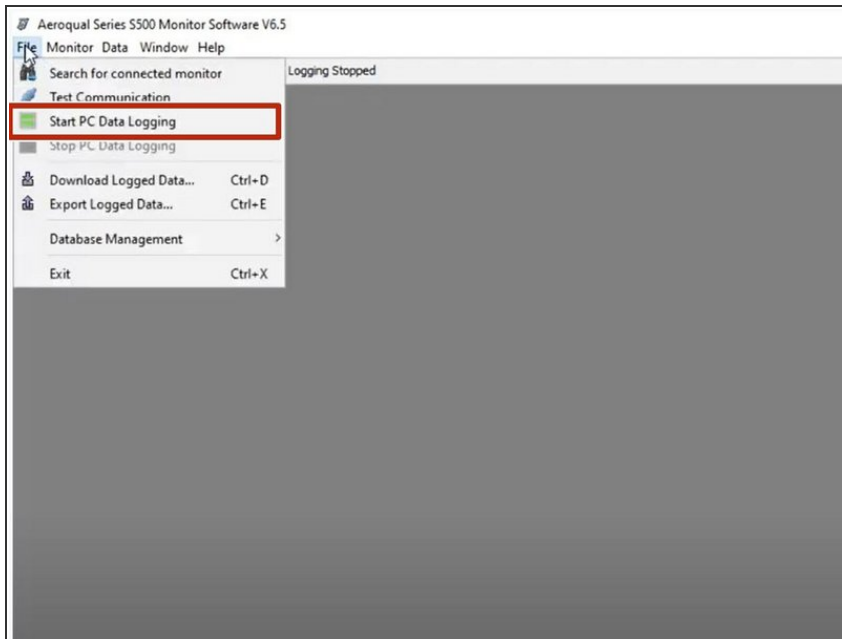

- [Launch the Aeroqual S500 software](#) and select **File > Start PC Data Logging**. Alternatively, click the start logging icon on the toolbar.
- Each record stored in the database contains the date, time, monitor ID, location ID, sensor type and sensor reading.
- i The monitor ID isn't logged in the monitor but is added to the database when it's downloaded to your PC.
- To stop PC data logging, select **File > Stop PC Data Logging** or click the stop logging icon on the toolbar. The data immediately starts to be stored in the Series 500 monitor memory.

For further support, contact [Technical Support](#).