


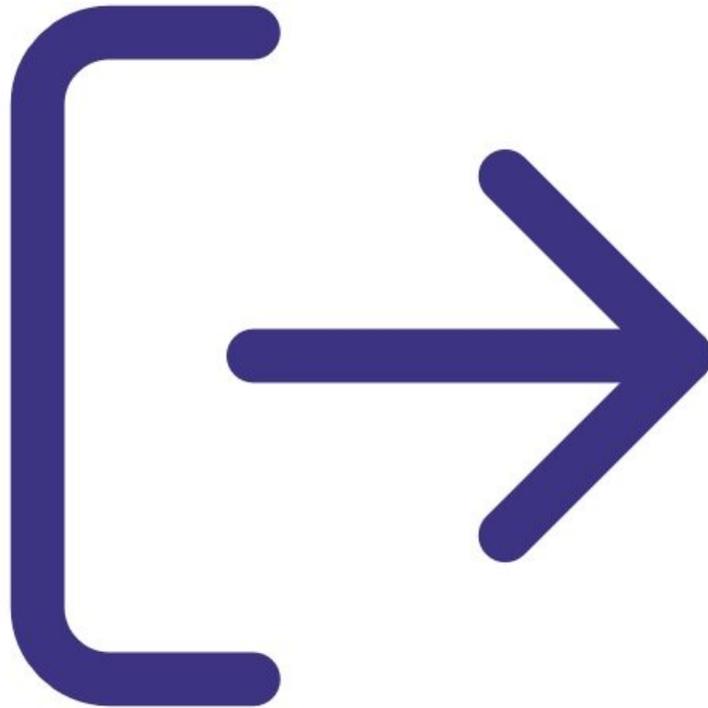

# Export data

Written By: StJohn Vuetilovoni




## INTRODUCTION

**Note:** This guide assumes you have already [installed the monitor's configuration software](#), [downloaded the cable driver](#) and [connected your monitor to a PC](#).

[video: <https://youtu.be/gH93QRXB21o>]

## Step 1 — Export data

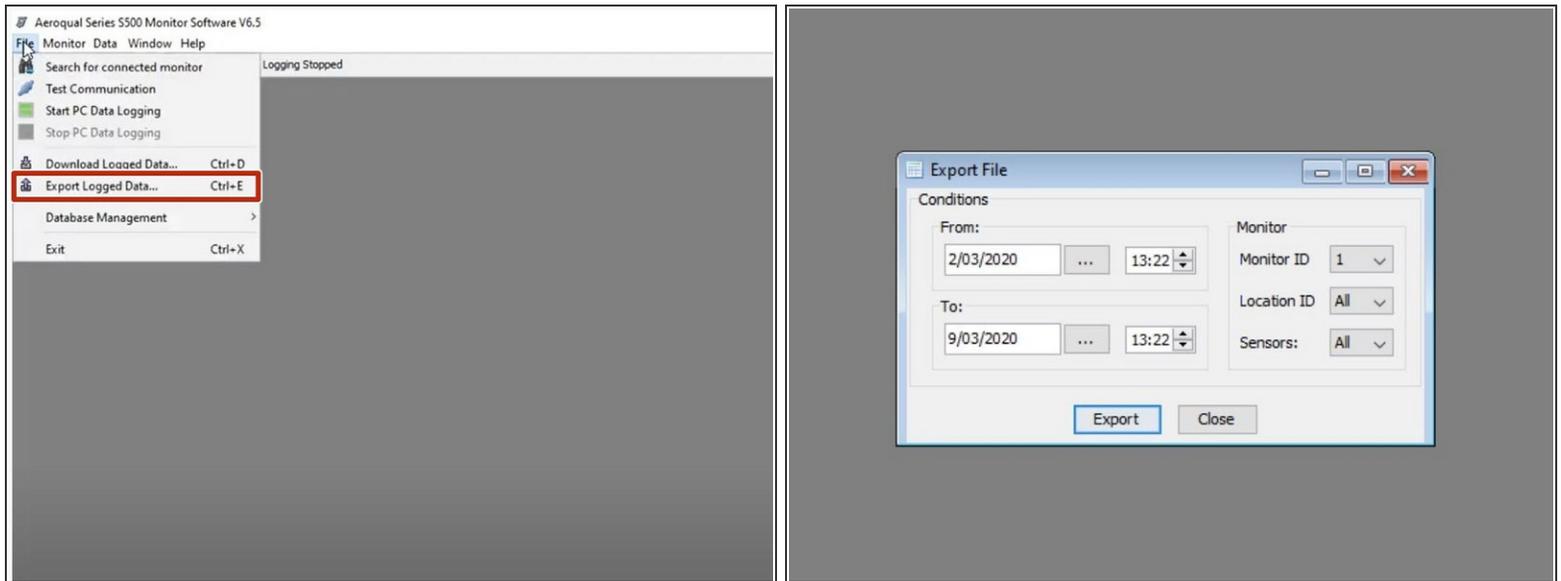

- [Launch the Aeroqual S500 software](#) and select **File** > **Export Logged Data** from the menu bar. The **Export File** dialog box appears.
- Use the date, time, monitor ID, location ID and sensor type filters to identify the data you want to export.
- Click **Export**.
- Select a directory, choose a file format (either plain text or MS Excel file) and click **Save**.
- ⓘ Only data from one monitor can be exported at a time. You can export a maximum of 50,000 lines in one file. If there are more than 50,000 lines, you'll need to narrow your search parameters and do two smaller exports.

For further support, contact [Technical Support](#).