aeroqual

Delete data

Written By: StJohn Vuetilovoni



This document was generated on 2022-05-14 04:33:56 AM (MST).

INTRODUCTION

Note: This guide assumes you have already <u>installed the monitor's configuration software</u>, <u>downloaded the cable driver</u> and <u>connected your monitor to a PC</u>.

This document was generated on 2022-05-14 04:33:56 AM (MST).

Step 1 — Deleting data

Aeroqual Series S500 Monitor Software V6 File Monitor Data Window Help	.5		
Search for connected monitor Test Communication Start PC Data Logging Stop PC Data Logging	Logging Stopped		
¹ Download Logged Data Ctrl+D ¹ Export Logged Data Ctrl+E		Delete Data	
Database Management		From:	Monitor
Exit Ctrl+X		2/03/2020 13:27 🜩	Monitor ID 1 ~
		То:	Location ID All 🗸
		9/03/2020 13:27 🜩	Sensors: All 🗸
		Delete	se
		-	

- <u>Launch the Aeroqual S500 software</u> and select File > Database Management > Delete Data from the menu bar. The Delete Data dialog box appears.
- Use the date, time, monitor ID, location ID and sensor type filters to identify the data you want to delete.
- Click **Delete**.
- When the warning notice appears, click **Yes** to delete the data.
- (i) Only data from one monitor can be deleted at a time.

For further support, contact <u>Technical Support</u>.

This document was generated on 2022-05-14 04:33:56 AM (MST).