aeroqual

Diagnose monitor

Written By: Tanya Taylor



This document was generated on 2022-04-29 07:48:47 PM (MST).

Step 1 — Enter Diagnostics and Advanced app



- To view real-time information about the status of your monitor's modules, you need engineer or administrator user permissions.
 - From the home screen, click
 Diagnostic and Advanced.

Step 2 — Run module report

ranced v Instrument v DS-VIRTUAL-07 (DS-VIRTUAL-07) v												
Select parameter PM10 ~		Averaging per	iod 1 minute	~ Pause	Export							
Time	PM10 (µg/m³)	Run time (Hours)	Pressure (mBar)	Laser current (mA)	Raw signal (Hz)	Bench temperature						
12:36 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:35 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:35 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:34 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:33 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:32 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:31 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:30 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:30 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:29 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:28 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:27 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:27 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:26 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:25 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:24 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
12:24 a.m.	0.00	2.340	3.450	4.560	5.670	6.780						
reserved.	0.00	· · · ·	~	v1.17 build 2	5.555							

- Select **Diagnostics** from the side menu.
- Data dynamically displays for the module that defaults into the Search parameter drop-down.
- Edit the search parameter to dynamically display data for another module.
- Click Export to download your report as a .csv file, which is easily opened in Microsoft Excel.

This document was generated on 2022-04-29 07:48:47 PM (MST).

Step 3 — View module settings

21 May 2020)											
Module	HO	H1	H2	H3	TIMA	TIMR	TEMA	TEMR	PWML	PWMH	HTR
PM1	0	1	760	298.15	2	60	1.4	2	<mark>1</mark> 80	180	1
PM2.5	0	1	760	298.15	2	60	1.4	2	180	180	1
PM10	0	1	760	298.15	2	60	1.4	2	180	180	1
TSP	0	1	760	298.15	2	60	1.4	2	180	180	1
PID	0	11.82	0	1	30	30	0	0	1	0	1
Battery Voltage	0	0	0	0	0	0	0	0	0	0	0
Refresh	Export										

For further support, contact <u>Technical Support</u>.

- Module control settings shouldn't be changed without instruction from Aeroqual. They are used by technical support to troubleshoot and diagnose your monitor's condition.
- Select Module Settings from the side menu to show a table of operational parameters for each module.
- Edit the settings as directed by Aeroqual technical support.

This document was generated on 2022-04-29 07:48:47 PM (MST).