


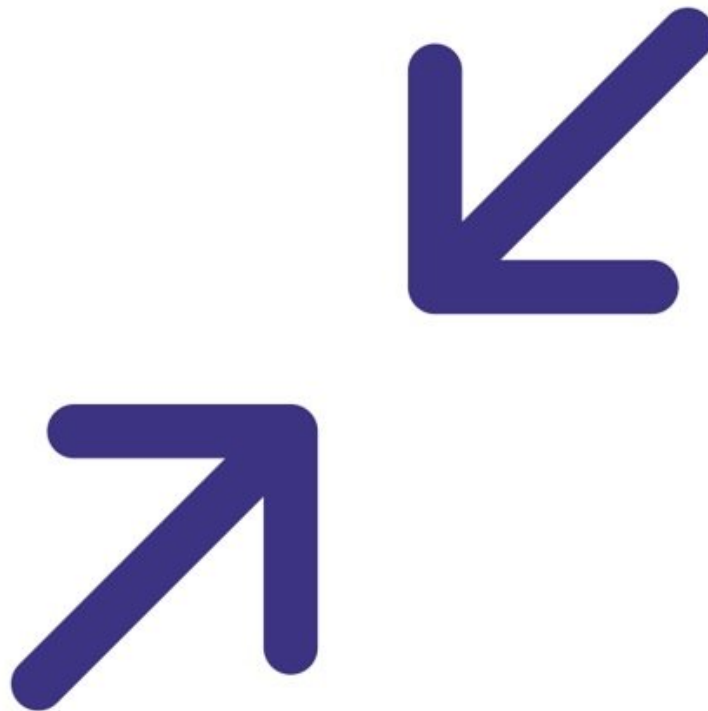

Calibration Accessory (RGR CALKIT) for Gas calibration

How to set up the RGR CALKIT gas calibration accessory.

Written By: Kyle Alberti



INTRODUCTION

RGR CALKIT can be used to calibrate all Aeroqual sensor heads except ammonia, perchloroethylene, ozone and dust.

Gas calibration using the RGR CALKIT should always be completed in a location with adequate ventilation.



TOOLS:

- [Gas regulator](#) (1)
- [Calgaz gas cylinders](#) (1)
- [1/8" I.D. Tubing - PVDF](#) (1)



PARTS:

- [RGR CALKIT Calibration Accessory](#) (1)

Step 1 — Connect tubing to calibration accessory




- ① The calibration accessory has barbed fittings that are intended to fit with 1/8" ID tubing.
- ⚠ Care should be taken in selecting a tubing material that is appropriate for the type of gas that you will be using to calibrate the sensor head.
- PVDF tubing is appropriate for most gases but the tubing's datasheet should be consulted for a full list.
- ① Either side of the calibration accessory can be designated the inlet or the outlet.
- ⚠ Not all gas that enters through the inlet exits through the calibration accessory outlet; be advised that some gas exits through the sensor head exhaust. Depending on your calibration gas of choice and concentration levels, you may need to perform this calibration under a fume hood.

Step 2 — Attach regulator to gas source



- Make sure the valve on your flow gas regulator is fully off.
- Screw the gas regulator onto your gas cylinder. When the regulator is correctly fitted, the pressure indicator will show the cylinder pressure.
- Always point the cylinder and regulator away from yourself and others when attaching or removing a pressure regulator.
- Secure the cylinder so it can't be knocked over while the regulator is attached.

Step 3 — Connect tubing to gas source and ventilation

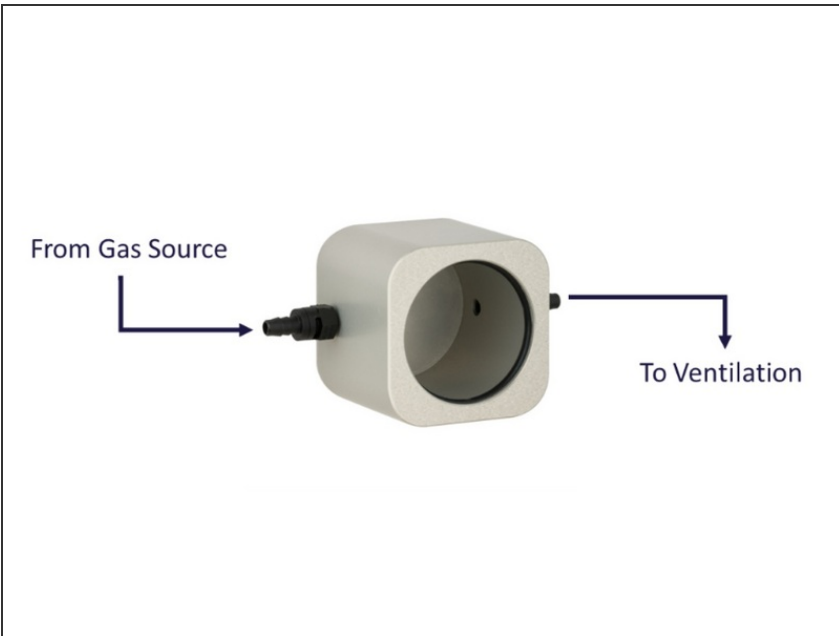

- Connect tubing to gas source and ventilation.
- Either side of the calibration accessory can be designated the inlet or the outlet

Step 4 — Attach the calibration accessory to the sensor head while the head is plugged into the Ranger



- Attach the sensor head to Ranger
- Turn Ranger On
- Attach the calibration accessory to the sensor head

Step 5 — Gently turn the valve on the regulator and begin to flow gas at >1L/min



- Check the cylinder pressure to ensure there's enough gas to perform the calibration (10% of full pressure should be enough).
- Gently turn the regulator valve anticlockwise and flow the target gas at >1L/min until the reading stabilizes (about 10 minutes).

Step 6 — Wait for the gas reading to stabilize



12:47 ●

NO₂
ppm

0.117

85%

- Wait for the gas reading to stabilize on the display of the Ranger

Location 01

May 17/23

For further support, contact Aeroqual Support.