




Attach gas inlet

Written By: Tanya Taylor



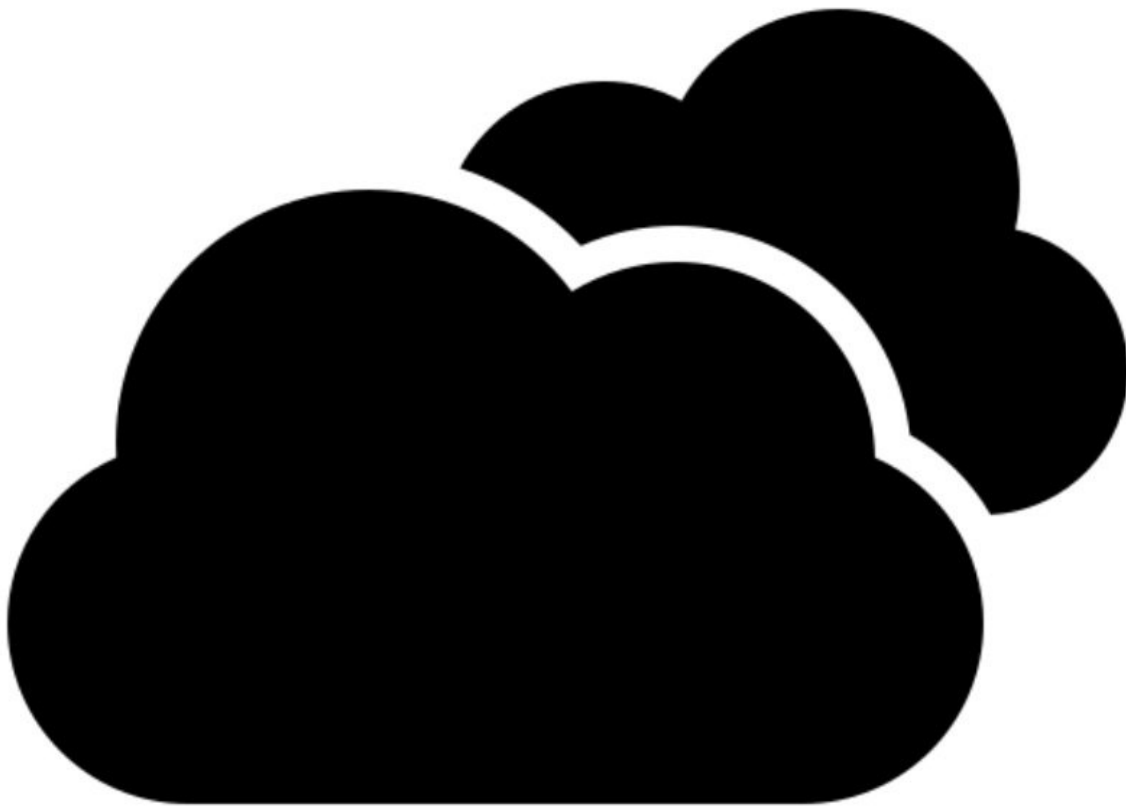

TOOLS:

- [Adjustable spanner](#) (1)
-

Step 1 — Attach inlet



- Attach the inlet using a ¼ inch Swagelok compression fitting.

Step 2 — Check gas flow



- [Perform a flow check](#) to make sure the inlet is fitted correctly and the sample pump is working properly.

Step 3 — Attach filter



- Fit the supplied Kynar fitting to the Swagelok nut at the end of the sample cane. This fitting contains the mesh filter.

For further support, contact [Technical Support](#).