




# Mount monitor

Written By: Tanya Taylor



## Step 1 — Assess fixtures

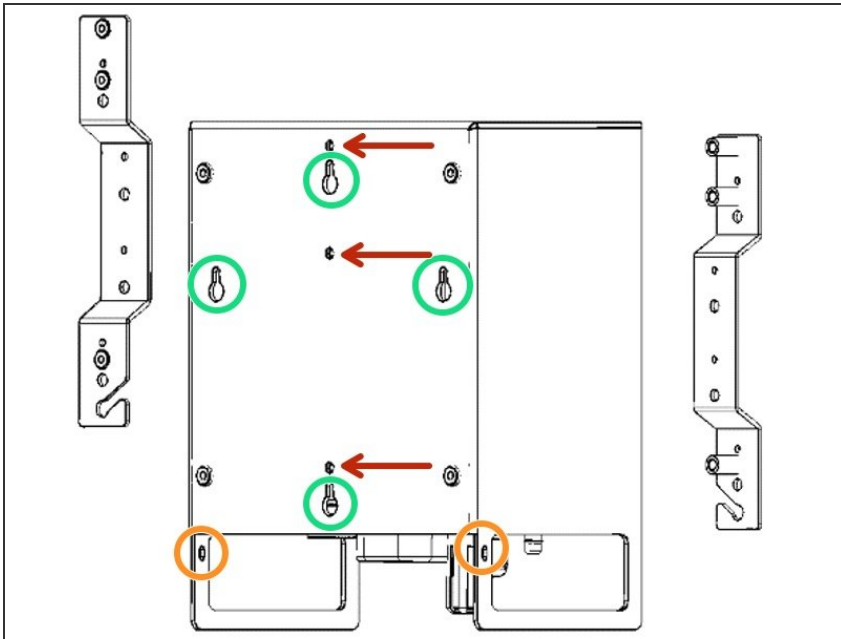

- The AQY 1 comes with a mounting bracket for mounting to a wall or pole.
- Key holes on the back of the monitor allow the bracket to be fixed vertically or horizontally.
- Alternatively, you can attach the bracket using the M3 screw mount points.
- There are 2 cable tie points to secure the power cable.

## Step 2 — Choose location



- Choose a location with good airflow away from sources that might affect data, e.g. kitchen vents and air conditioning units.
- Leave at least 5 meters space either side of the monitor, and at least 2.4 meters space above and below it.

## Step 3 — Mount monitor



- Mount the monitor against a pole or wall using the mounting bracket.
- Connect the 5 meter power cable to an indoor mains power socket.
- Secure the power cable using zip ties.

For further support, contact [Technical Support](#).