




Perform span calibration

Written By: Tanya Taylor

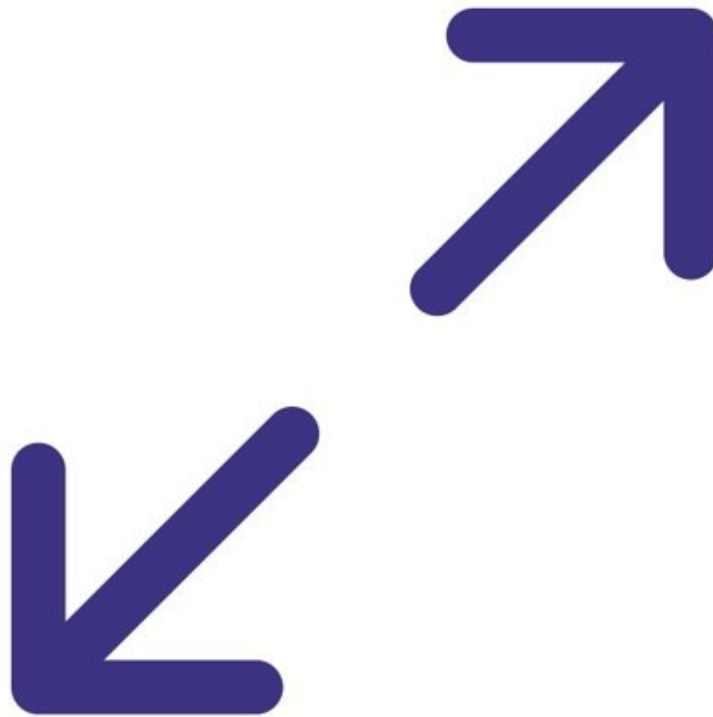

INTRODUCTION

If you have a Series 500 or Series 300 handheld monitor, you can span calibrate the Type 1 sensor heads you use with your Series 900 fixed monitor. The only exceptions are ammonia and perchlorethylene. For these Type 1 sensors, you must return them for factory calibration or buy replacements.


To perform a span calibration using a Series 500 or Series 300 handheld monitor, you also need Aeroqual's calibration accessory (AS R42) with 10ml syringe, tubing (Tygon or PTFE depending on the gas), a gas regulator and gas cylinders.

Step 1 — Set up equipment



- [Click here to set up the calibration accessory.](#)

Step 2 — Perform span calibration

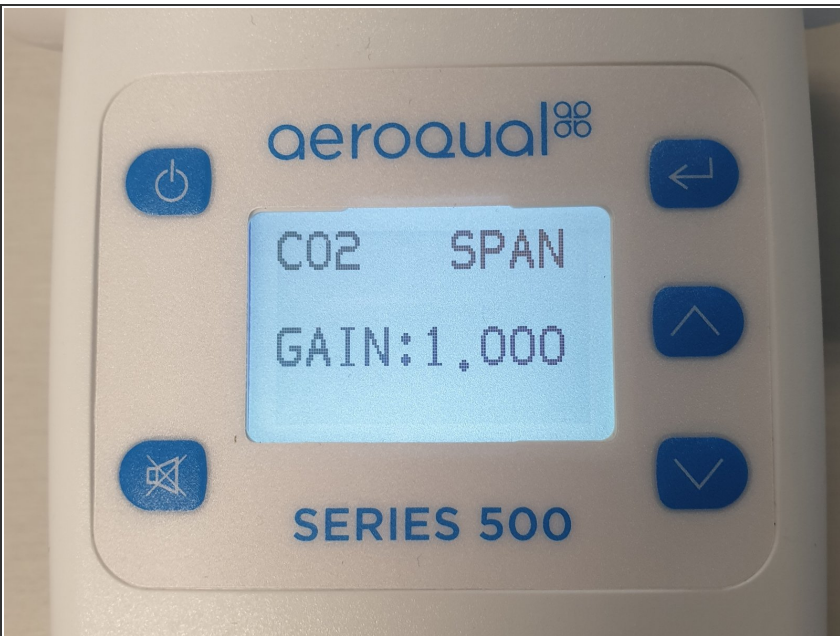

- [Click here to perform the span calibration.](#)

For further support, contact [Technical Support](#).