



Clear logged data



Written By: StJohn Vuetilovoni



INTRODUCTION


Use this guide to delete all data stored in your data log.

Step 1 — Enter logging setup

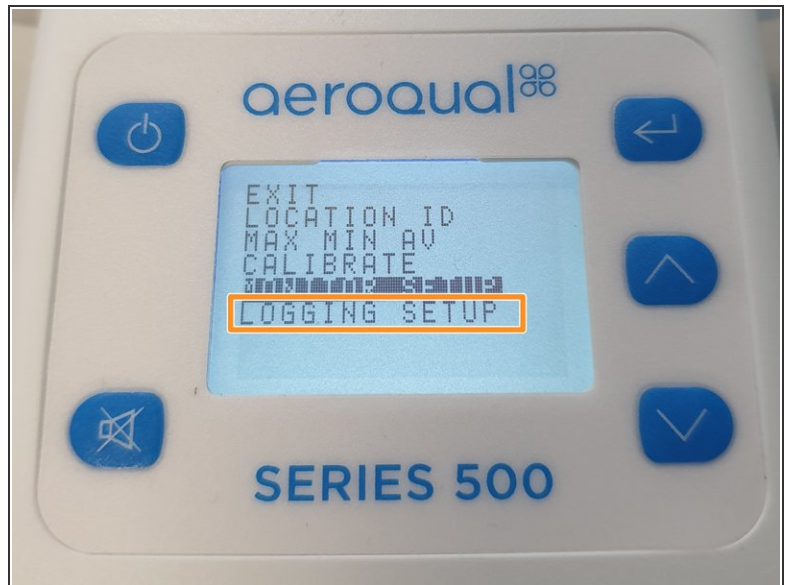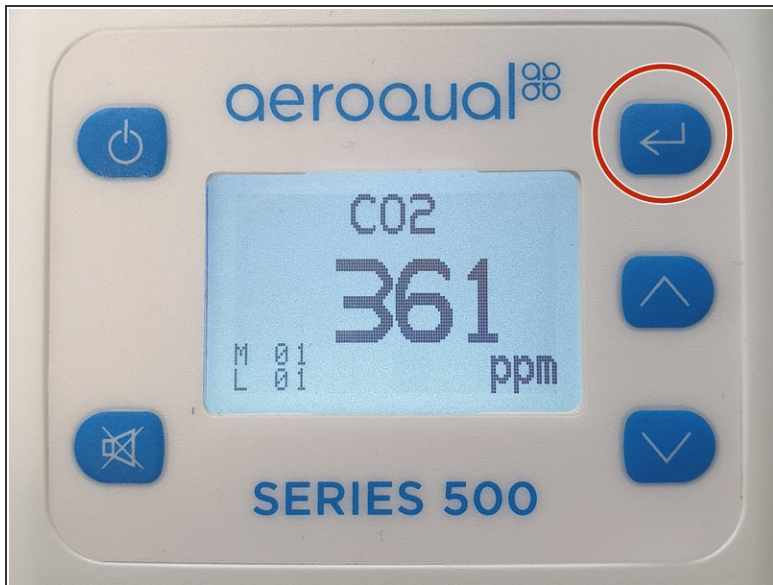


- Press the **ENTER** button.
- Select **LOGGING SETUP** from the main menu.

Step 2 — Clear log

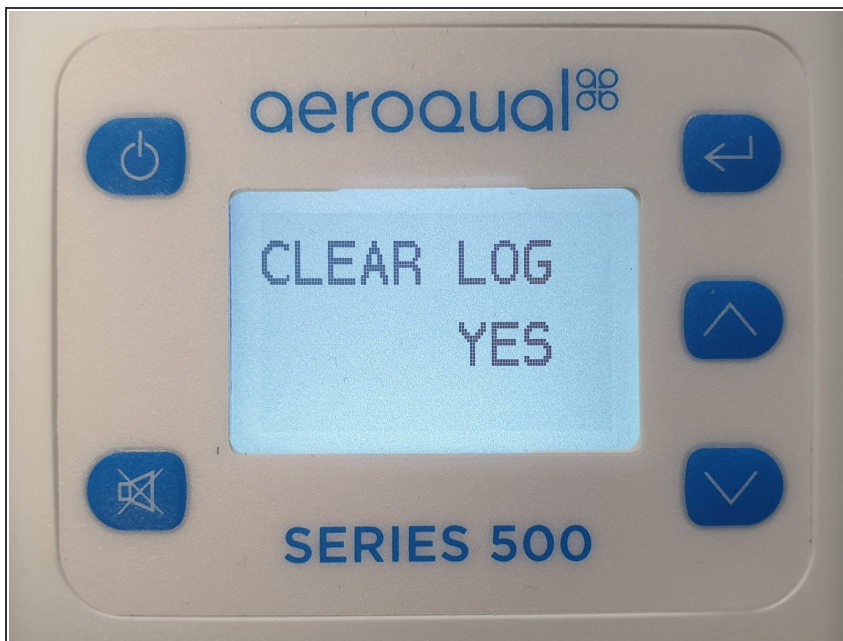

- When **LOG FREQ** appears on the display, [change the frequency](#) or press **ENTER** to confirm the existing selection.
- When **CLEAR LOG** appears, use the **UP/DOWN** buttons to select **YES**.
- Press **ENTER** to confirm the selection and return to the setup menu.

Step 3 — Shortcut method

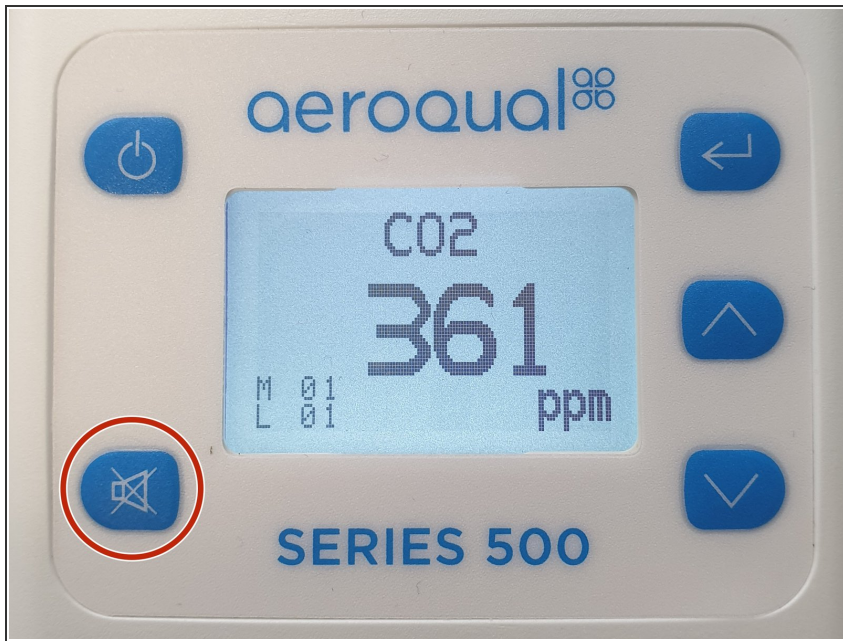

- You can also clear the data log directly from the main display screen by holding down the **MUTE** button for 2 seconds until the monitor beeps (if the monitor keys are not muted).

For further support, contact [Technical Support](#).