


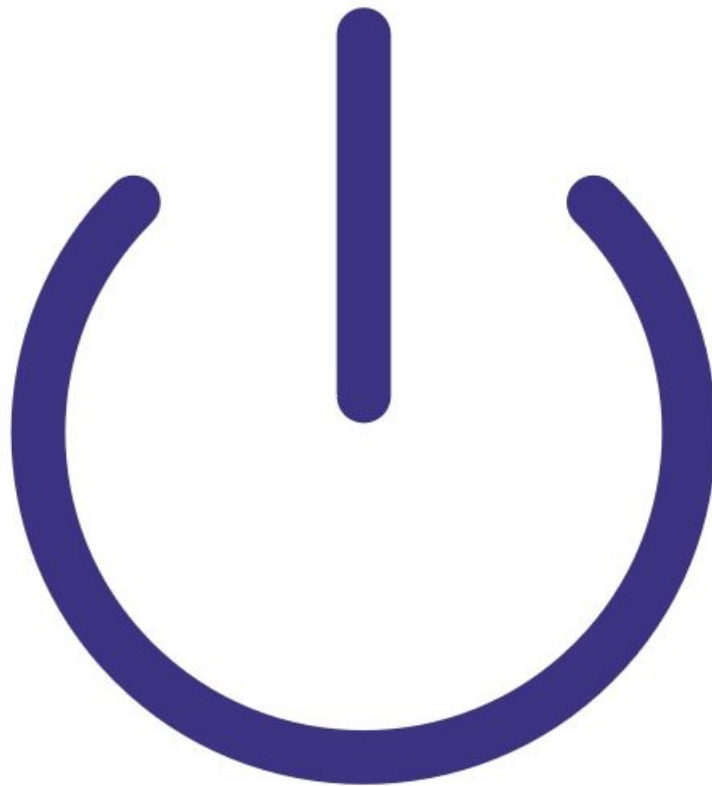


Standby and power off

Written By: StJohn Vuetilovoni




Step 1 — Enter standby mode

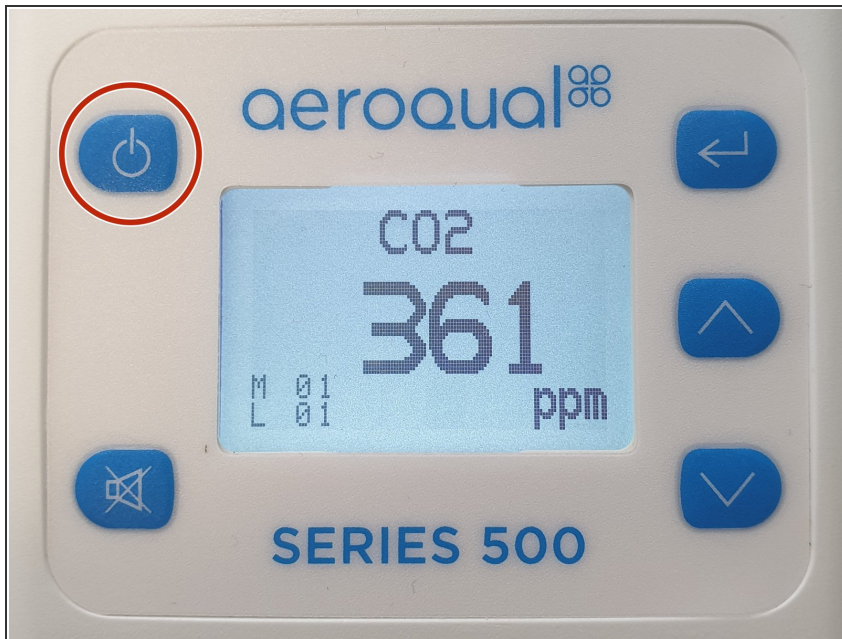

- ① Standby mode conserves power between operations but keeps the sensor warm, ready to measure the gas concentration with only a short warm-up.
- With the monitor on, press the **POWER** button once. This stops the operation of the monitor and changes the display to show the sensor head type and a standby icon.
- ① When using a CO2 sensor head in standby mode, the sensor runs at full power and the fan stays on.
- To return the monitor to operational mode, press the **POWER** button once.

Step 2 — Turn off monitor

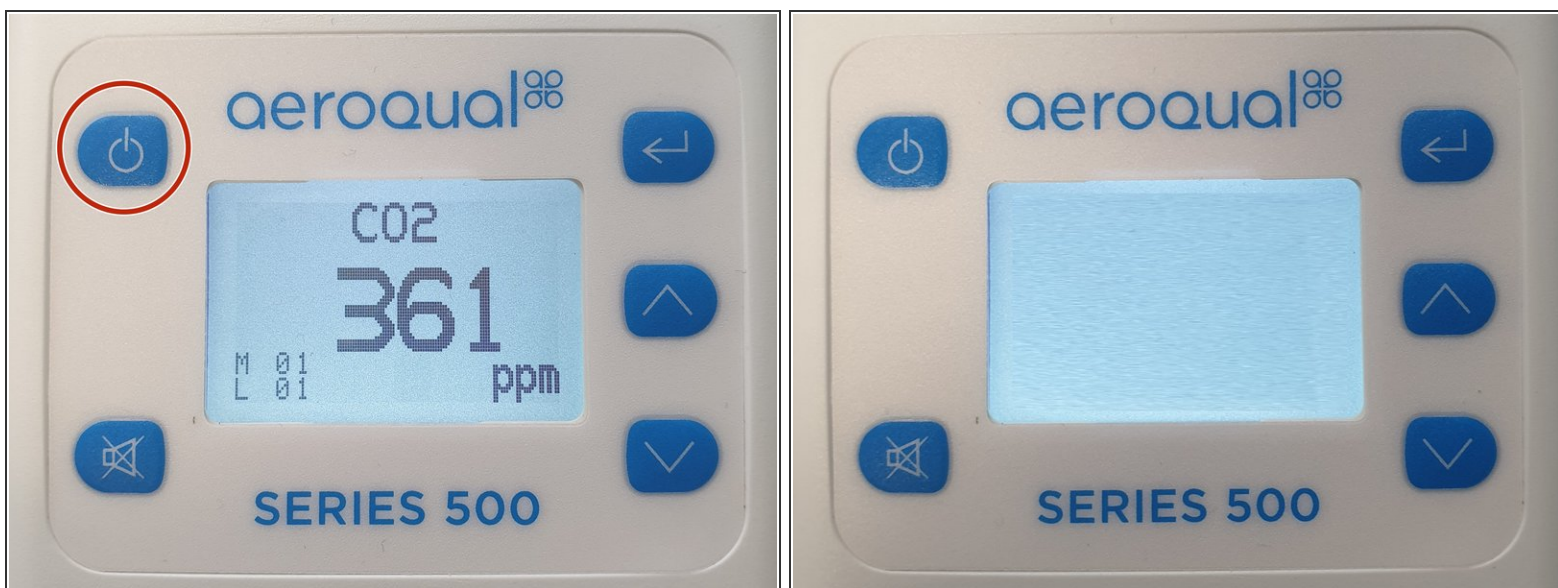

- To turn the monitor off, press and hold the **POWER** button for 2 seconds until the monitor beeps. The display turns blank and the monitor stops operating.

For further support, contact [Technical Support](#).