




Data display screens

See what is displayed on the screen and how to navigate to different screens.

Written By: StJohn Vuetilovoni




Step 1 — Main screen

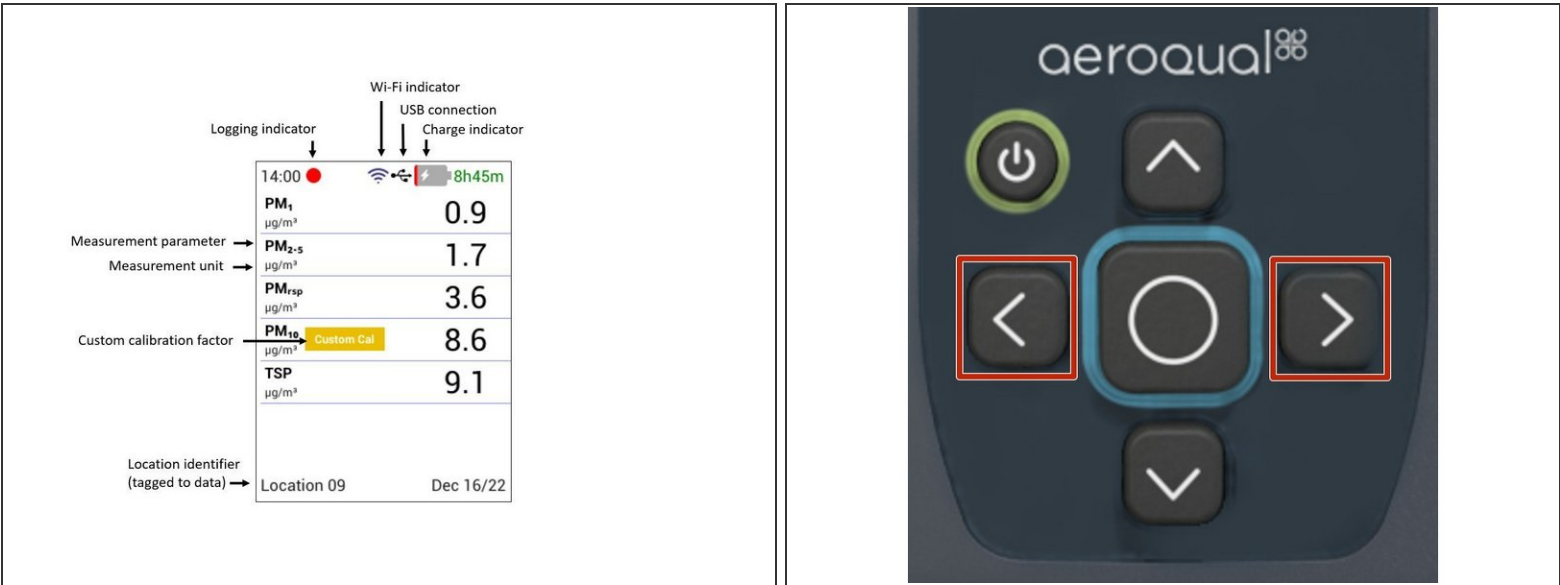

- i** Upon startup, the main data display page will be shown.
- i** The main screen contains real-time measurement data coming from the sensor head connected to the instrument. On the top, it displays time, recording status, Wi-Fi connection status, and battery/charging status. On the bottom, it displays Location ID and date.

 - Press the **LEFT** and **RIGHT ARROWS** to navigate between Summary, Detail, and AQI display screens.
- i** The AQI screen is available only while using the PMX sensor head.

Step 2 — Data and AQI Screens

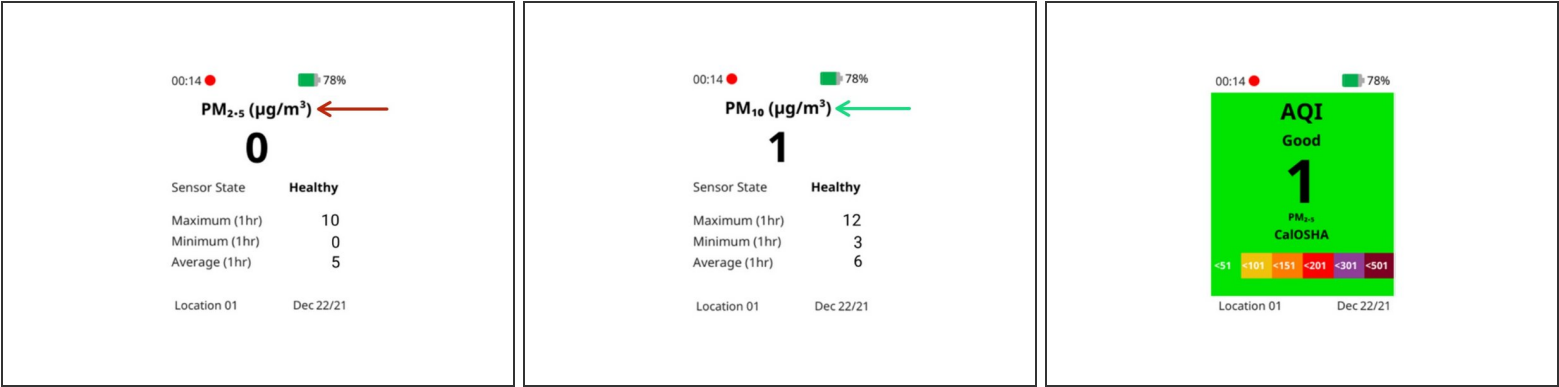

- ❗ If the sensor head is able to measure more than one parameter, then a Detail screen is available for each parameter.
 - Scroll through each parameter's Detail screen by using the **LEFT** and **RIGHT** arrows.
- ❗ An Air Quality Index (AQI) will be visible if the AQI feature is turned On
 - Scroll through the AQI screens by using the **LEFT** and **RIGHT** arrows.
- ❗ The AQI screen is only available while using the PMX sensor head.

For further support, contact Aeroqual Support.