



# Create graph

Written By: StJohn Vuetilovoni




## INTRODUCTION

While logging directly to a PC, you can view data in two different graph formats.

**Note:** It assumes you have already [installed the monitor's configuration software](#), [downloaded the cable driver](#) and [connected your monitor to a PC](#).

## Step 1 — Configure graph

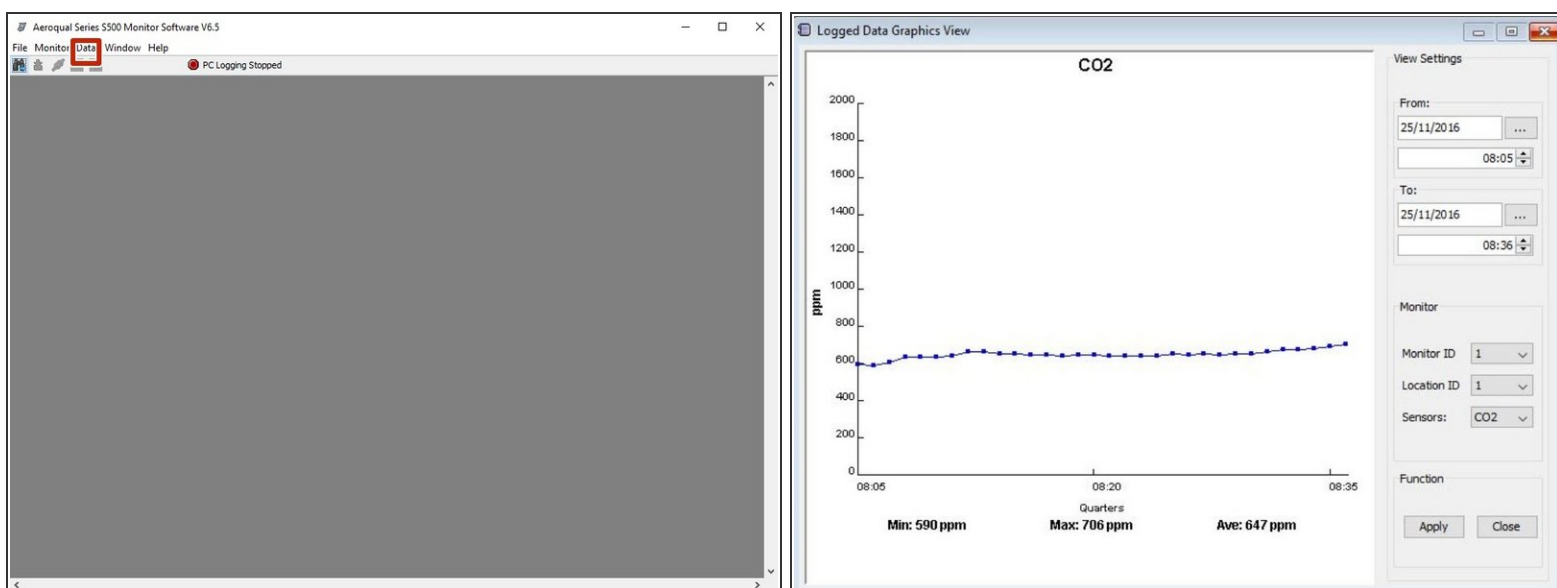

- [Launch the Aeroqual S500 software](#) and select **Data > Real Time Graph View** or **Data > Graph > Logged Data** from the menu bar. Each parameter shows in its own tab.
- To configure a graph, select **Data > Graph > Default Style**, or right-click on the graph and select **Graph Style**.
- To zoom in, click and drag over a specific area.
- To save or print a graph, right click on the graph and select the relevant option. Graphs are saved as a .jpg files.
- To reset a graph, right click and select **Reset to Default**.
- **i** In **Logged Data Graph View**, use the date, time, monitor ID, location ID and sensor filters to narrow the data and click **Apply**.

For further support, contact [Technical Support](#).