



View daily data

Written By: StJohn Vuetilovoni





INTRODUCTION

Use this guide to view a summary of data for each 24-hour period.

The summary shows the minimum, maximum and average readings over each 24 hour period (from midnight one day to midnight the next).

Note: This guide assumes you have already [installed the monitor's configuration software](#), [downloaded the cable driver](#) and [connected your monitor to a PC](#).

Step 1 — Filter data

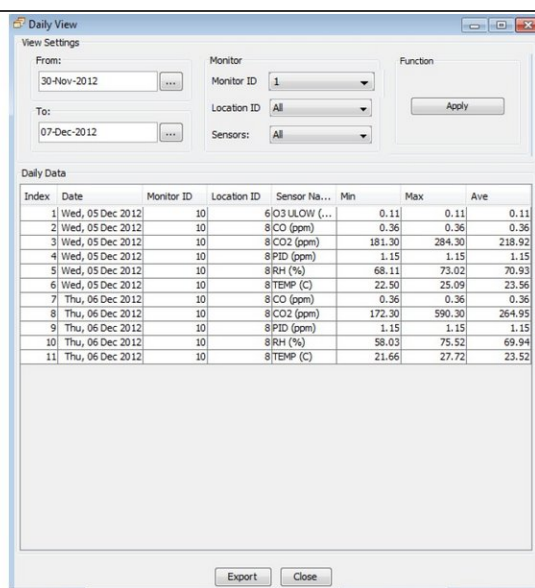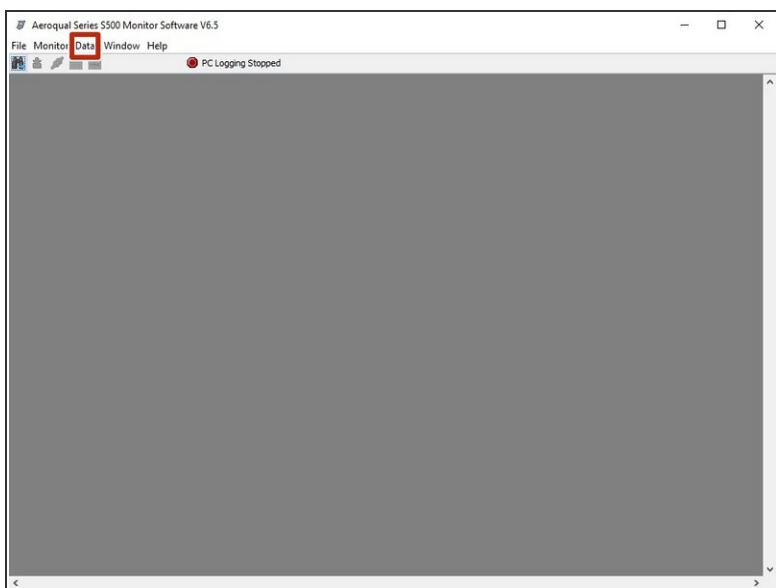

- [Launch the Aeroqual S500 software](#) and select **Data > Daily Analysis** from the menu bar. The **Daily View** window appears.
- Click **View All**, or use the date, monitor ID, location ID and sensor filters to narrow your search and click **Apply**.
- To export summary data files for viewing in programs such as MS Excel, click **Export**.

For further support, contact [Technical Support](#).